# EZ-LOADER-08

## OPERATING INSTRUCTIONS

Relieve any internal gun pressure.

In case of:

A) Sealweld Super Gun® or Screw Prime Gun

***Remove the Barrel***

B) Sealweld® Uni-Seal or Equivalent.

***Remove the Top Cap with Hose Assembly***

C) Any Hydraulic Hand Gun

***Remove the Sealant Cap with the Hose Assembly***

**NOTE:** In all cases, make sure the piston is flush with the top of the sealant barrel.

Remove the plastic cap from the cartridge and poke a hole through the side of the cartridge with a nail above the grease line. This will remove any air between the Piston of the EZ-LOADER-08 and the grease line.

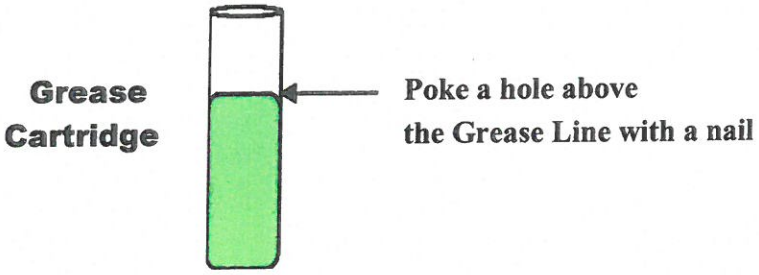


Remove the EZ-LOADER-08 Adapter and slide the cartridge into the EZ-LOADER-08 Barrel.

When cartridge is completely inside EZ-LOADER-08, remove PULL TAB from cartridge and thread adapter onto the EZ-LOADER-08 Barrel.

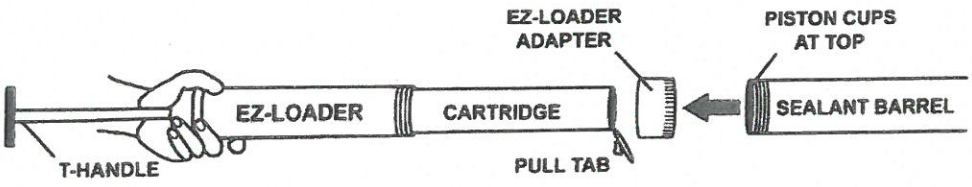


Thread the EZ-LOADER-08 assembly onto the sealant barrel.

Note: Leave the threaded connection loose, as this will allow the air trapped between sealant and piston cup to escape. Gently push the EZ-LOADER-08 T-HANDLE forward until contact is made between sealant and piston cups; this forces the trapped air to escape through loose threads.

Tighten EZ-LOADER-08 assembly to the sealant barrel and follow the instructions on the back of this page.

**Toll Free: (800) 661-8465**

# Loading a Sealant Injection Pump with an EZ-LOADER

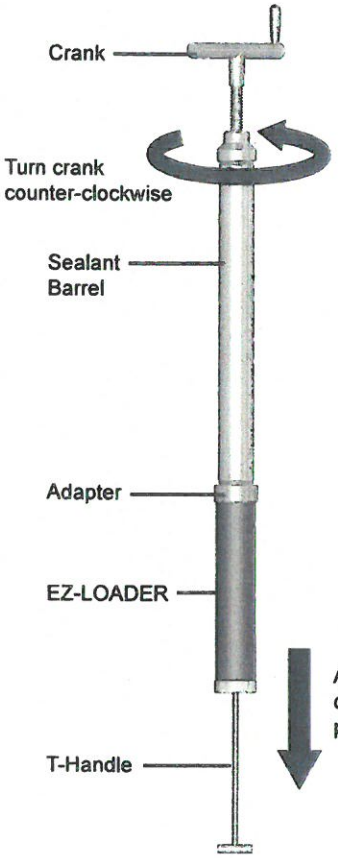


### Sealweld SuperGun

1) Place EZ-LOADER on the floor.

2) Apply slight downward pressure while turning the crank handle counter clockwise.

3) When T-Handle on EZ-LOADER is completely inserted, your gun is reloaded. Disconnect EZ-LOADER adapter from sealant barrel.

4) Reconnect sealant barrel to gun head and tighten.

5) To prime gun - turn crank clockwise and stroke handle until sealant appears at coupler.

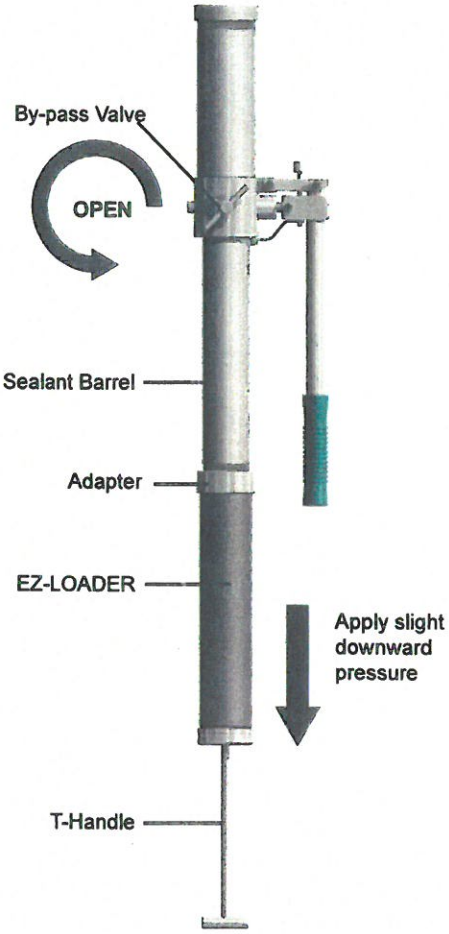


### Any Hydraulic Hand Gun

1) Place EZ-LOADER on floor.

2) Open by-pass valve.

3) Apply slight downward pressure until EZ-LOADER T-Handle is completely inserted.

4) Disconnect EZ-LOADER adapter from sealant barrel.

5) Reconnect top cap to sealant barrel and tighten. Close by-pass valve and you are ready.

### Sealweld Uni-Seal

1) Place EZ-LOADER on the floor.

2) Place foot pedal in OFF position.

3) Apply slight downward pressure until T-Handle is completely inserted.

4) Disconnect EZ-LOADER adapter from sealant barrel.
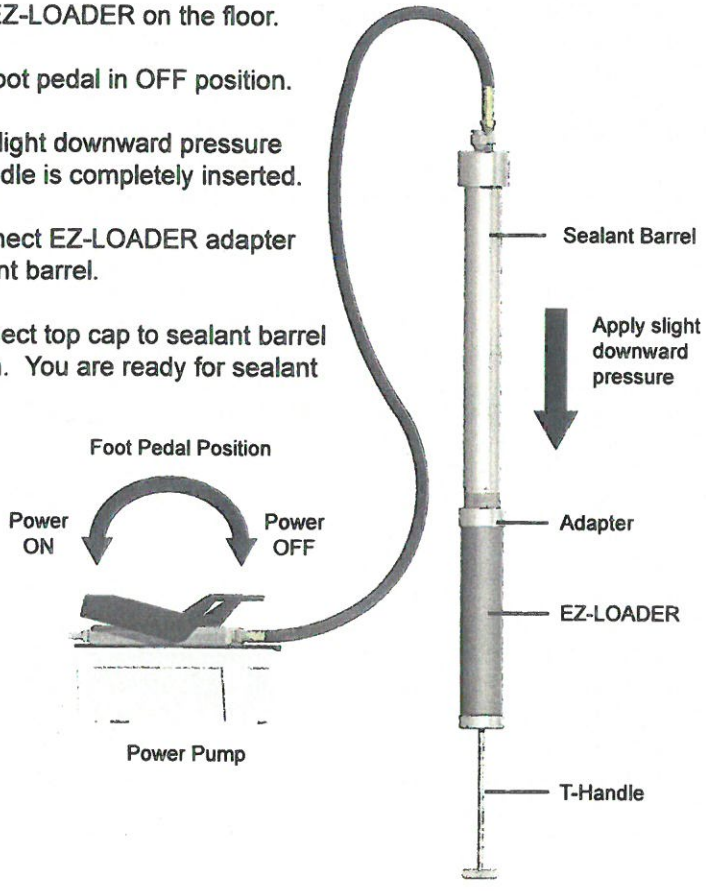
5) Reconnect top cap to sealant barrel and tighten. You are ready for sealant injection.